



FEATURES

SNOC Teak furniture highlights the beauty and texture of Teak wood. Due to the natural variations of the wood, there may be differences in texture and color between pieces..

Natural Teak will gradually develop a beautiful silver-gray patina over time. The aging process will vary depending on external factors, climate, usage, and maintenance with Teak oil.

To protect the furniture from external elements, we recommend using our specially designed outdoor covers. This will help extend the lifespan of the product and minimize the impact of weather conditions.

OIL SURFACE

Teak wood has a dense and high oil content, making it particularly suitable for outdoor use.

The natural oils in Teak provide resistance against fungi, termites, and wood-boring insects.

The natural oils in teak may surface as a result of exposure to rain and humidity and appear like water stains. This is a normal occurrence and it is part of the wood's characteristics. When you encounter such a situation:

MAINTENANCE OF HANDMADE TEAK FURNITURE

OIL SURFACE

- Use the SNOC Teak Maintenance Kit to clean the product and remove any oiliness from the surface.
- After allowing it to dry, you can gently sand away any remaining stains using 120-grit sandpaper.
- Applying the SNOC Teak Maintenance Kit will help make the wood more resistant to moisture and staining.

MAINTENANCE AND REPAIR

- Applying the SNOC Teak Maintenance Kit before the initial use of the product and at the end of each season will help preserve the original quality of Teak wood, enhance surface resistance against moisture, UV rays, food and beverage stains, and pests.
- We recommend using Snoc Teak cleaner to remove stubborn stains. Spray water onto the furniture from a distance of approximately 30 cm, ensuring that it does not exceed a maximum of 83 bar (1200 psi). Rinse and allow it to dry in the sun.
- Over time, Teak wood may develop an increased presence of wood grain due to exposure to moisture. In such cases, gently sanding the surface with 120-grit fine sandpaper will smooth the surface
- Before starting maintenance on your Teak products, it is essential to clean the surface using 220-grit sandpaper. Otherwise, the desired results may not be achieved from the oiling process without sanding.

RECOMMENDATIONS

- Avoid allowing water to accumulate on the surface of furniture and cushions. This can lead to staining and water penetration into the fabric's inner surface.
- We recommend using SNOC protective covers in appropriate sizes for your products.
- When using protective covers, ensure that the furniture and cushions are clean and dry
- If possible, remove the cushions before covering the furniture with the protective cover.
- If the cushions get wet, position them with the zipper facing downwards and open to allow all the water to drain out.



FEATURES

Teak wood has a dense and high oil content, making it particularly suitable for outdoor use.

The natural oils provide resistance against decay, fungi, termites, and wood-boring insects.

SNOC's Teak Maintenance Oils are sustainable materials and are applied to Teak furniture using a wire brush. Moisture causes both the main material and the maintenance oil to naturally expand and contract, leading to fine cracks.

Just like any painted surface, applied finishes will fade and wear when exposed to external elements. Over time, the finish will separate from the natural Teak underneath and begin to turn gray. Temperature changes, climate, and exposure to external elements all affect the maintenance and required frequency. When Teak furniture is used without maintenance or protection, the aging process accelerates.

We strongly recommend using our specially adapted protective covers to shield the furniture from external elements.

MAINTENANCE AND REPAIR

When the furniture starts to show signs of wear, we recommend the following:

- Wash the furniture with a hose (avoid using high-pressure water) and clean it with the SNOC Maintenance Kit.
- Use a sponge or a soft-bristle brush to clean the surface and remove dirt and worn paint, and allow it to dry (for 24 hours) to provide a clean surface.
- If the wood shows signs of deformation due to exposure to moisture over time, lightly sand it with 120-grit sandpaper.
- Apply Snoc Teak Polish to maintain its original color. Let it dry for 24 hours.
- Apply Snoc Teak Oil to protect the furniture from UV rays and food and beverage stains.

RECOMMENDATIONS

- Avoid allowing water to accumulate on the surface of the furniture and cushions.
- Do not leave damp or wet cushions on the furniture for an extended period.
- We recommend using SNOC protective covers in sizes that fit your furniture.
- When using protective covers, make sure the furniture and cushions are clean and dry.
- If the products will not be used for more than a few days, remove the cushions to prevent mold formation.
- If the cushions get wet, open the zipper and lay them on their sides to ensure proper drainage of water.

OUTDOOR FURNITURE COVER GUIDE

MAINTENANCE

Outdoor furniture should be covered when not in use, to protect it from external elements. Before placing the protective cover on the furniture, clean the surface by rinsing it with a hose and drying it with a soft cloth. Ensure that no residue is left on the surface, as it can lead to mold formation over time. During the use of the protective cover, clean any accumulated dirt or residue on the cover's surface once a month. Use a soft-bristle brush, cold or lukewarm water, and a mild, natural soap cleaning solution for your furniture. Avoid using chemical detergents.

Allow the furniture to air dry only.

HOW TO USE?

- Thoroughly clean all furniture and cushions before storage. Allow the furniture to completely dry before storage.
- Cushions should be stored in a dry place when not in use for an extended period or during the off-season. Cushions should be completely clean and dry before storage
- If storing cushions is not possible, lay them flat on the seat before covering. This ensures that the cover fits properly.
- Place the cover over the furniture; the protective covers are specially designed to fit the shape of each furniture piece. Ensure that the cover is fitted according to the shape of the furniture.
- For sections, arrange the furniture as you would normally and place each protective cover over the appropriate piece; secure the cover by pulling the pins located at the bottom to ensure complete coverage.

PROTECTIVE COVER FEATURES

To ensure the long-term health and durability of your outdoor furniture, we strongly recommend covering them with protective covers during the off-season. Prior to covering, it is important to thoroughly clean and fully dry your furniture to prevent mold during storage. Please refer to our care documentation for detailed furniture cleaning instructions for each material type.


Our specially designed covers for outdoor furniture offer superior performance and are made from highly durable, breathable, stain-resistant fabric that is resistant to mold, tearing, and fading. They are the industry's choice for protecting furniture from dust, dirt, harsh UV rays, and challenging weather conditions.

- It is highly compatible with our outdoor furniture collections.
- It is made of durable 100% solution-dyed polyester fabric.
- The breathable fabric is resistant to mold and mildew
- It is resistant to shrinkage, fading, UV rays, and harsh weather conditions.
- It maintains its shape without tearing or stretching.
- The fabric is suitable for all weather conditions and is water-resistant.

OUTDOOR FURNITURE COVER GUIDE

TENT ELEVATION

To prevent water from pooling on the product, a tent elevation is created. This allows for proper water drainage and ensures that water flows away from the surface.

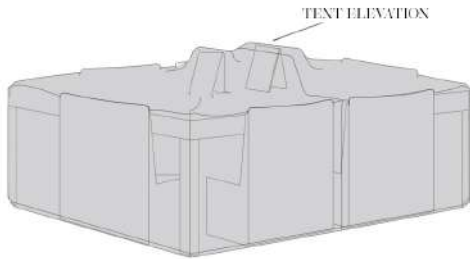

FREQUENTLY ASKED QUESTIONS

WHAT TYPE OF FABRIC IS USED ON SNOC FURNITURE COVERS?

SNOC uses highly durable, breathable, stain-resistant fabric that is resistant to water, mold, tearing, and fading, protecting the furniture from dust and dirt, harsh ultraviolet rays, and challenging weather conditions.

HOW CAN I USE MY SNOC FURNITURE COVER?

Before covering the furniture with the protection cover, make sure to clean and dry the frame and cushions thoroughly.

- Whenever possible, remove the cushions to prevent mold issues in humid environments. However, SNOC protection covers are designed to accommodate cushions within the cover. Place the back cushions flat on the seat cushion(s). If storing the cushions separately, clean and dry them appropriately before covering.
- If your furniture has back cushions, place them flat on top of the seat cushions before fitting the cover. This will ensure a proper fit of the protection cover.
- If your protective cover is for a dining table set, make sure that all the chairs are pushed in as much as possible before putting on the cover.
- For dining tables, coffee tables, and side tables, it is recommended to place a tall accessory such as a vase, which will prevent water from pooling and allow it to flow downward, before fitting the cover.
- Place the covers over the furniture. If your cover has a zipper, open it before placing it over the furniture and then zip it closed securely. Fasten the cords underneath the protection cover by pulling them from both ends.

OUTDOOR FURNITURE COVER GUIDE

WHAT SHOULD I DO IF MY COVER DOES NOT FIT PROPERLY?

- Check the label on the front of the cover to ensure that it is placed correctly on the intended product.
- If your furniture has back cushions, place them flat on top of the seat cushions before fitting the cover. This will help the cover to fit properly.
- If your cover has a zipper, make sure it is open. This will make it easier for the cover to pass over the frame.
- If your cover came with tent supports, ensure that they are upright and placed against the flat surface of the product. If none of the above steps help, contact SNOC Customer Service at 0850 800 6464 for assistance.

WHAT SHOULD I DO IF WATER IS COLLECTING IN MY COVER?

- Ensure that all tent supports provided are in an upright position and placed against the flat surface of the product.
- Make sure that all back cushions are placed flat on top of the seat cushions. The cover is designed to help water flow by placing the cushions flat.
- Ensure that the cover is pulled down as much as possible to prevent any sagging that may cause water pooling. Tighten the cords to keep the cover taut and in place.
- Check the label on the front of the cover to ensure that it is the correct fit for the product's frame. If none of the above steps help, contact SNOC Customer Service at 0850 800 64 64 for assistance.